



Installation Manual

HOFA Acoustic Picture

General Information:




At high volume levels, acoustic pictures may generate noise due to vibrations on adjacent surfaces. To prevent this, a piece of felt or fabric can be attached to the back of the acoustic image.



If you have any questions during installation of the acoustic picture, please do not hesitate to contact us by phone or email:
<https://hofa-akustik.de/kontakt/>

Required Tools and Equipment

- Drilling machine with drill bits
- Cordless screwdriver or screwdriver
- Alternatively: hammer and nail

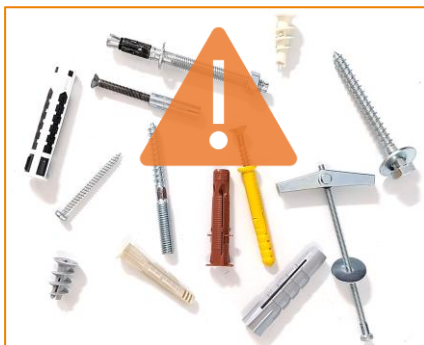


The correct selection of secure mounting hardware depends entirely on the substrate. If in doubt, please have the load-bearing capacity of the substrate and the selection of dowels and screws or nails checked by a specialist.

Assembly of acoustic pictures (special sizes only)


If acoustic images exceed the maximum dimensions of 150 cm x 100 cm, the product will be delivered as a kit.

Step 1

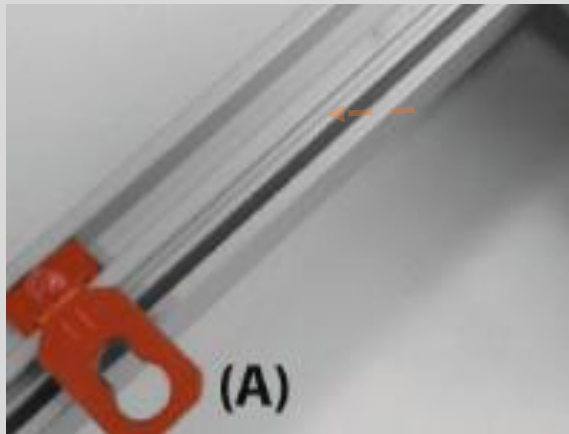


Insert the hangers (A) into the mounting groove on the back of the 4 profiles. Screw the hangers into the 4 profiles at intervals of approx. 0.5 m.

Step 2

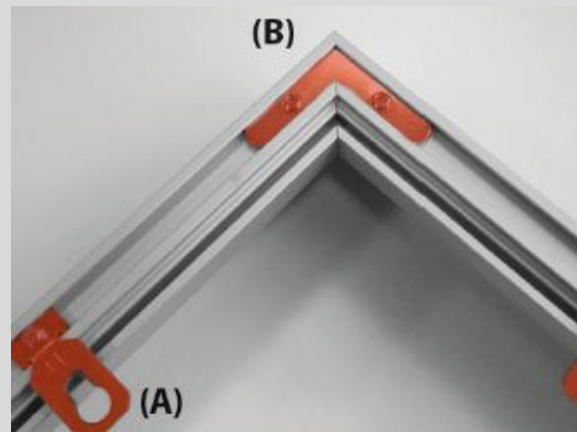

Screw in/hammer in the screw/nail to a depth of approx. 3 mm.

Step 3

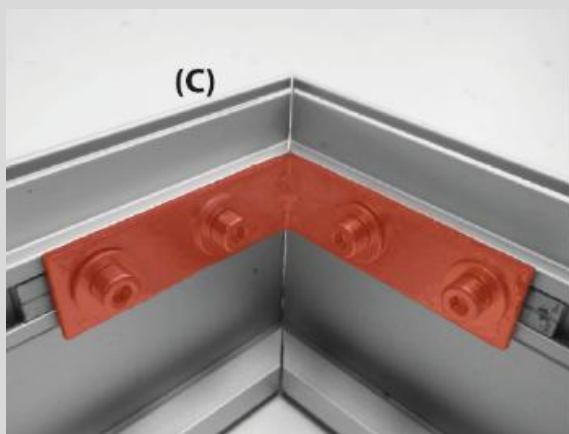

Connect the frame profiles with 4 corner brackets (C) in the inner groove on the side.

Step 4




If available: Screw one knot corner (D) into each of the 4 corners on the back of the frame

Wall/ Ceiling Mounting by Screw Attachment

Wandmontage des Akustikbildes

Step 1

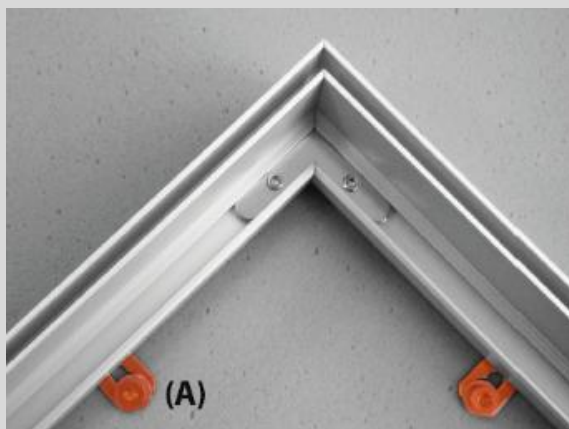


Screw the frame directly onto the wall using dowels and the hangers (A). Please ensure that the opposite frame parts are mounted parallel to each other.

Step 2



Screw the wooden panel between the frame profiles onto the wall and glue the absorber panels onto the wooden panel using acoustic adhesive.

Step 3

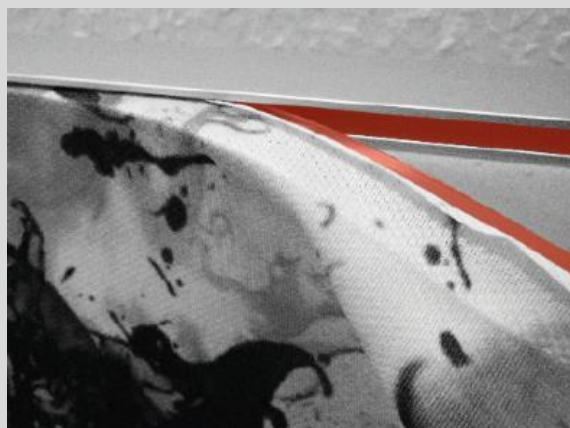

Clip the fabric cover into the frame

Additional Mounting Instructions:

Please note that the aluminum frame of the acoustic picture has hard corners and edges that could potentially cause injury.

PCare Instructions:

- For dust or small dirt particles, please use a feather duster or vacuum cleaner.
- For light stains/marks, you can put water on a sponge and gently wipe the material.
- Avoid harsh cleaning agents such as brushes, as the aluminum frame can be easily scratched.
- Please note that the print may fade over time due to intense sunlight.
- If you want to use cleaning agents, make sure that they are color-neutral (white or transparent). If possible, test the cleaning agent on an inconspicuous area first.



► HOFA-Akustik

Phone: +49 7251 3472-400 | **Email:** akustik@hofa.de | hofa-akustik.de/en

- **HOFA-Plugins** - Premium plugins for a perfect workflow when producing, mixing, and mastering.
- **HOFA-College** - The international online academy for audio engineering and music production.
- **HOFA-Media** - Your experienced partner for high-quality CD and vinyl pressing.
- **HOFA-Studios** - Recording, mixing & mastering in one of the most renowned recording studios in Germany.

hofa-plugins.de/en
hofa-college.de/en
hofa-media.de
hofa-studios.de/en

HOFA GmbH
Lusshardtstrasse 1-3, 76689 Karlsdorf, GERMANY | Phone 07251 / 3472 – 0 | Email office@hofa.de | www.hofa.de
Managing Directors: Jochen Sachse, Jan Bönisch | Court Mannheim HRB No. 231615